

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children and pets are present, take basic safety precautions, including the following:

KEEP OUT OF REACH OF CHILDREN!

READ ALL INSTRUCTIONS BEFORE USING.

KEEP AWAY FROM WATER!

DANGER — As with most electrical appliances, parts are electrically live even when the switch is off. To reduce the risk of death by electric shock:

1. Always unplug appliance immediately after using.
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into, water or any other liquid.
5. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. This appliance should never be left unattended when plugged in.
2. Do not pull, twist, or wrap line cord around appliance.
3. This appliance should not be used by, on, or near children or individuals with certain disabilities.
4. Use this appliance only for its intended use, as described in this manual. Do not use attachments not recommended by the manufacturer. Do not use an extension cord to operate appliance.
5. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.
6. Keep the cord away from heated surfaces.
7. Never use while sleeping.
8. Never drop or insert any object into any opening.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Do not use an extension cord with this appliance.
11. This appliance is hot when in use. Do not let heated surfaces touch eyes or skin.
12. Never block the air openings of the appliance or place it on a soft surface,

- such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair and the like.
13. Do not place the appliance on any surface while it is operating.
14. Do not touch hot surfaces of the appliance; use handles or knobs.
15. Do not use this appliance near bathtubs, showers, toilets or any other recipient containing water.
16. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
17. Before plugging in, read the information about dual voltage contained in the “dual voltage” section of this manual.

OPERATING INSTRUCTIONS

You can view and download a digital version of these instructions <https://www.babylissprola.com/manuales/>

SAFETY INSTRUCTIONS

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have

been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

2. Children should be supervised to ensure that they do not play with the appliance.
3. Burn Hazard. Keep appliance out of reach from young children, particularly during use and cool down.

OPERATING INSTRUCTIONS

This appliance is intended for professional use. Use on Alternating Current (50-60Hz) only. Standard appliances are designed to operate at 127-220V~.

DUAL VOLTAGE
This flat iron has dual voltage. It will automatically adjust to the proper voltage. Use an adapter plug with correct configuration prior to use in outlet.

STRAIGHTENING BASICS
1. Plug the straightening iron into a standard electrical outlet (127-220V~). It is not necessary to touch the iron with your hand to judge readiness.

2. Press the power button to turn the iron on. To turn the iron off, press and hold the power button for 1.5 seconds.
3. Use the +/- temperature controls to select the setting for your hair type. You

can use the chart outlined below as a reference. The iron will heat up very quickly.

TEMPERATURE SETTINGS	HAIR TYPE
285°F (140°C) - 300°F (150°C)	Fragile, very fine hair
320°F (160°C) - 340°F (170°C)	Thin, easy-to-straighten hair
355°F (180°C) - 375°F (190°C)	Normal textured hair
395°F (200°C) - 410°F (210°C)	Wavy or curly hair
430°F (220°C) - 450°F (230°C)	Coarse, very thick hair

The selected temperature automatically locks after 3 seconds. To unlock/change the temperature, press and hold the +/- temperature controls for 2 seconds. **TEMPERATURE MEMORY FUNCTION:** the iron automatically reverts to the last temperature selected when powered on.


4. Section dry hair evenly, and comb each section. Position the iron on the hair as far up as you want hair to be straightened, being careful not to let the iron touch the scalp. Close the iron with the hair between the two plates and gently pull the iron down to the end of the section of hair you are straightening. Repeat this process several times, if necessary. Let the hair cool before combing.

STYLING TIPS USING STRAIGHTENER
For short, spiky looks use gel or spray and hold the sections up and away from the head while you straighten.
For smoothing and taming curly hair, or creating a stylish, smooth bob, use the straightener just on the ends, leaving the hair wavy at the roots for lift and body. For this type of effect, keep the straightener moving while following the shape of your hairstyle.

- GRAPHITE + TITANIUM**
- Graphite's extremely smooth surface delivers outstanding glide, reducing friction on the hair and making styling effortless.
 - Graphite + Titanium's heat conductivity accelerates heat transfer to help maintain even, stable temperatures, and excellent heat recovery for super-efficient styling results.
 - Graphite + Titanium's strength delivers a styling tool that will stand up to the rigors of daily salon use, day-in day-out.

GET TO KNOW YOUR PROFESSIONAL STRAIGHTENER

Models BGT181DBR - ½"
BGT183DBR - 1¼"

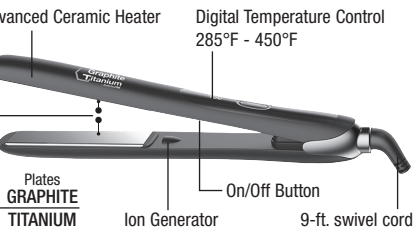

NOTICE

THIS PRODUCT IS EQUIPPED WITH AN INSTANT HEAT CIRCUITRY.

DO NOT LEAVE PRODUCT ON OR PLUGGED IN WHILE NOT IN USE. UNIT WILL BURN OUT IF POWER IS KEPT ON FOR AN EXTENDED PERIOD OF TIME. WARRANTY WILL BE VOIDED. TURN UNIT OFF AND UNPLUG WHEN NOT IN USE.

USER MAINTENANCE

Your iron is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, let it cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

CAUTION

NEVER allow the power supply cord to be pulled or twisted. Never wrap the cord around the unit. Damage will occur at the high flex point of entry into the unit, causing it to rupture and short. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance is easy to store. Allow unit to cool, then simply put back in the box, and store out of reach of children in a safe, dry location. Do not jerk or strain cord at plug connections.

WARNING:
IF YOU THINK THE POWER IS OFF WHEN THE SWITCH IS OFF, YOU'RE WRONG.

KEEP AWAY FROM WATER



Everyone knows that electricity and water are a dangerous combination, but did you know that an electrical appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES.

©2019 Babyliss S.A.R.L.

IB-19/426B

PRANCHA ALISADORA PROFISSIONAL

APENAS PARA USO PROFISSIONAL

Modelos: BGT181DBR/BGT183DBR

Para sua segurança e para desfrutar este produto, leia atentamente as instruções antes de usá-lo.

IMPORTANTES INSTRUÇÕES DE SEGURANÇA

É necessário sempre seguir certos cuidados básicos de segurança ao utilizar um aparelho elétrico, especialmente quando crianças estão presentes, incluindo os seguintes:

LEIA TODAS AS INSTRUÇÕES ANTES DE USAR.
MANTER LONGE DA ÁGUA.

PERIGO - Um aparelho ainda está eletricamente energizado mesmo se o interruptor está desligado. Para reduzir o risco de morte por choque elétrico:

1. Imediatamente após o uso, sempre desligue o aparelho da tomada.
 2. Não utilize ao tomar banho ou no chuveiro.
 3. Não coloque nem guarde o aparelho onde ele possa cair ou ser puxado para uma banheira ou pia.
 4. Não coloque nem deixe cair em água ou outro líquido.
 5. Se o aparelho cair em água, desligue-o imediatamente da tomada. Não ponha a mão na água.
- ADVERTÊNCIA** -

este aparelho.

11. Este aparelho fica quente quando em uso. Não permita que superfícies quentes entrem em contato com os olhos ou pele.
12. Quando em uso, não coloque o aparelho em nenhuma superfície.
13. Não toque nas superfícies quentes do aparelho; use os cabos ou partes salientes.
14. Não use este aparelho perto de banheiras, chuveiros, bacias ou outros recipientes contendo água.
15. Se o cabo de alimentação estiver danificado, ele deve ser substituído pelo agente de serviço do fabricante ou por técnicos igualmente qualificados para evitar situações de risco.
16. Antes de ligar na tomada, leia as instruções sobre dupla voltagem contidas nas instruções deste manual.
17. Antes de colocar na tomada, por favor leia a informação de bivolt que consta na seção "bivolt" desse manual.

GUARDE ESTAS INSTRUÇÕES

Você pode visualizar e baixar uma versão digital destas instruções <https://www.babylissprola.com/conteudo/manuais-do-usuario/>

INSTRUÇÕES DE SEGURANÇA

1. Este aparelho não é destinado ao uso por pessoas (incluindo crianças) com capacidade física reduzida, sensorial ou mental, ou a falta de experiência e conhecimento, a menos que tenham supervisão ou instruções sobre o uso do aparelho por uma pessoa responsável pela sua segurança.
2. As crianças devem ser vigiadas para garantir que não brinquem com o aparelho.
3. Perigo de queimaduras. Manter o aparelho fora do alcance das crianças, especialmente durante o seu uso. Deixe esfriar.

INSTRUÇÕES DE OPERAÇÃO

Este aparelho foi projetado para uso profissional. Utilize apenas Corrente Alternada (50-60Hz). Aparelhos normais são feitos para operar em 127-220V~.

BI VOLT

Este aparelho tem bi volt. Por tanto, irá se ajustar automaticamente à tensão adequada. Utilize um adaptador com a configuração correta antes de colocar na tomada.

CONCEITOS BÁSICO DE SUAVIZAÇÃO

1. Conecte o aparelho em um toma de tensão standard (127-220V~). Não é necessário tocar o aparelho com as mãos para verificar seu aquecimento.
2. Pressione o botão para ligar o aparelho. Para apagar o aparelho, manter pressionado o botão durante 1,5 segundos.
3. Utilizar o controles de temperatura +/- para escolher o configuração para o tipo de cabelo. Pode utilizar a tabela em anexo como referência. O aparelho aquece rapidamente.

CONFIGURAÇÕES DE TEMPERATURA	TIPO DE CABELO
285°F (140°C) - 300°F (150°C)	Cabelo frágil e muito fino
320°F (160°C) - 340°F (170°C)	Cabelo fino e fácil de alisar
355°F (180°C) - 375°F (190°C)	Cabelo com textura normal
395°F (200°C) - 410°F (210°C)	Cabelo ondulado ou curling
430°F (220°C) - 450°F (230°C)	Cabelo grosso e muito grosso

A temperatura selecionada bloqueia-se automaticamente após 3 segundos. Para desbloquear/ alterar a temperatura, pressione e segure os contoles de temperatura +/- por 2 segundos.

FUNÇÃO MEMÓRIA DE TEMPERATURA: O ferro volta automaticamente à última temperatura selecionada quando ligado.

4. Seque o cabelo de maneira uniforme e penteie cada seção. Coloque o aparelho a partir da altura para alisar o cabelo, tomando cuidado de não deixar que o aparelho toque o couro cabeludo. Feche as suas pranchas com o cabelo entre as duas chapas e puxe cuidadosamente até o final da seção de cabelo que deseja alisar. Repetir este processo várias vezes, caso necessário. Deixe esfriar o cabelo antes de pentear.

CONSELHO DE ESTILO UTILIZAÇÃO DO APARELHO

Para um aspecto curto e pontudo, usar gel ou spray e manter o seções para cima e longe da cabeça enquanto alisa.

Para alisar o cabelo cacheado, ou para criar um toque elegante e suave, usar o aparelho até o extremo, deixando o cabelo ondulado nas raízes com um efeito elevação. Para este tipo


de efeito, manter o aparelho em movimento enquanto ainda forma o penteado.

GRAPHITE + TITANIUM

- A superfície extremamente suave de grafite oferece um slide excelente, reduz o dano no cabelo e facilita o penteado.
- O condutividade termal de graphite + titanium acelera a transferência de calor que ajuda manter as temperaturas uniformes e estáveis e uma excelente recuperação de calor para conseguir resultados de penteado super eficientes.
- O resistência de graphite + titanium oferece uma ferramenta de desenho que resiste o uso rigoroso diário de salão, dia após dia.

CONHEÇA A SUA PRANCHA ALISADORA PROFISSIONAL

Modelos BGT181DBR - ½"
BGT183DBR - 1¼"

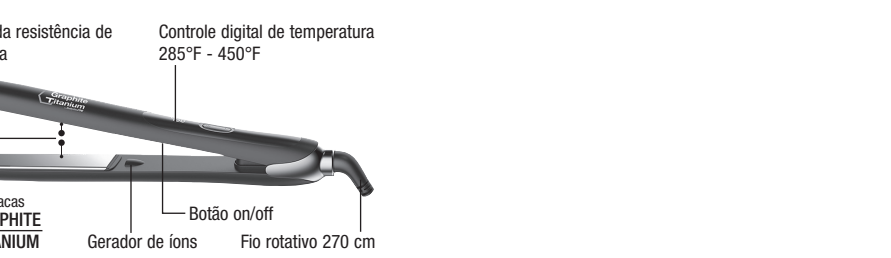

AVISO

ESTE PRODUTO ESTÁ EQUIPADO COM UM CIRCUITO DE CALOR IMEDIATO. ESTA TECNOLOGIA DE ÚLTIMA GERAÇÃO PERMITE O AQUECEDOR ATINGIR A TEMPERATURA DE OPERAÇÃO EM MENOS DE UM MINUTO. NÃO DEIXE O PRODUTO LIGADO OU CONECTADO QUANDO FORA DE USO. O APARELHO VAI QUEIMAR SE FICAR LIGADO DURANTE UM LONGO PERÍODO DE TEMPO. A GARANTIA SERÁ ANULADA. DESLIGUE O APARELHO E TIRE DA TOMADA QUANDO NÃO O FOR UTILIZAR.

INSTRUÇÕES DE MANUTENÇÃO

Seu aparelho requer pouca manutenção. Não precisa de lubrificação. Mantenha todas as aberturas livres de poeira e fiapos. Quando seja necessário limpá-lo, desconecte, deixe esfriar e limpe a superfície externa com um pano humedecido. Em caso de mau funcionamento, desligue o aparelho, aguarde esfriar e devolva-o a um centro de serviço autorizado; Não tente reparar o aparelho.

PRECAUÇÃO

NUNCA solte, não torça nem enrole o cabo elétrico. Nunca enrole com força ao redor do aparelho; Isso pode danificar a junção flexível que o liga ao aparelho, produzindo sua ruptura ou um curto-circuito. Verifique o cabo com frequência para se certificar de que não esteja danificado. Pare de usar o aparelho imediatamente se o cabo parece danificado ou se o aparelho parar de funcionar ou funcionar de forma intermitente.

ARMAZENAMENTO

Quando não o utiliza, o aparelho é fácil de armazenar. Deixe esfriar e guarde em um lugar seco e seguro, fora do alcance de crianças. Não puxe nem torça o cabo ao nível da tomada.

AVISO:
SE VOCÊ ACREDITA QUE NÃO HÁ CORRENTE QUANDO O APARELHO ESTÁ DESLIGADO, ESTÁ ERRADO.

MANTENHA-O LONGE DA ÁGUA



Todos nós sabemos que não se deve misturar a eletricidade e a água. Mas você sabia que um aparelho elétrico permanece sob tensão, mesmo que esteja desligado? Se estiver ligado, há corrente. Por isso, sempre desconecte os aparelhos elétricos após o uso.

SEMPRE DESLIGUE OS APARELHOS PEQUENOS

ROGER IND. COM. LTDA
RUA EDNA ROMANINI, 71
SAO PAULO – SP
BRASIL
FONE: (55 11) 2662-6011
MODELO: BGT181DBR
127-220V~ 50-60Hz 40W
MODELO: BGT183DBR
127-220V~ 50-60Hz 56W
FABRICADO NA P.R.C.



PROFESSIONAL STRAIGHTENER
FOR PROFESSIONAL USE ONLY

Models: BGT181DBR/BGT183DBR

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

IB-19/426B